


HIGHLAND INFLATOR



HIGHLAND INFLATOR TOOL
P/N: TL126

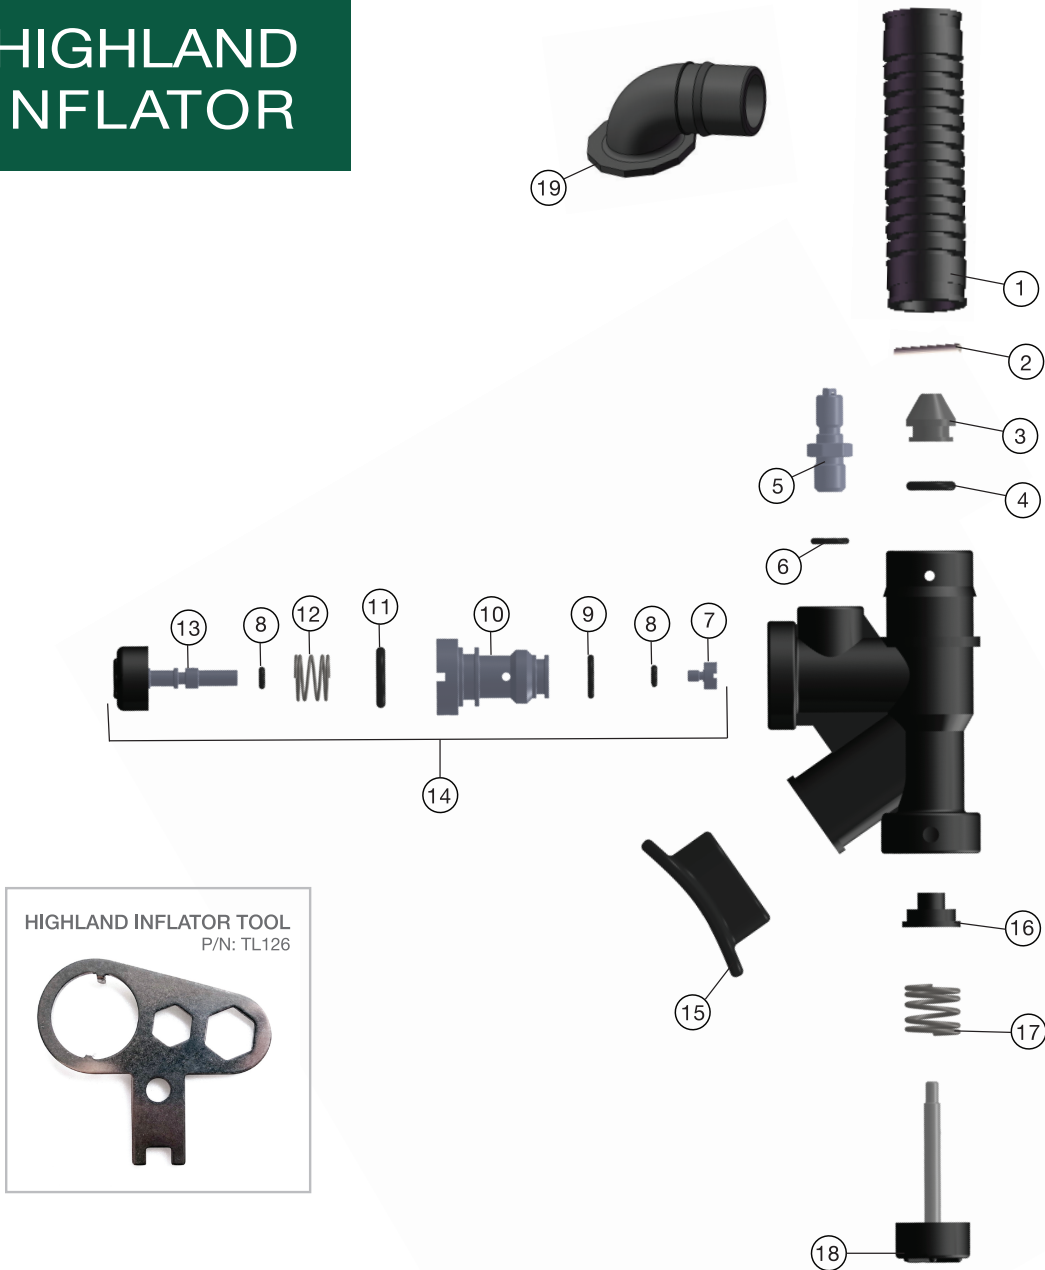

#	Part #	Description	#	Part #	Description
	BKH01	SERVICE KIT, HIGHLAND INFLATOR	9.	<i>BPH12</i>	<i>O-RING</i>
	TL126	HIGHLAND INFLATOR TOOL	10.	BPH14	VALVE HOUSING
	HL205	HIGHLAND INFLATOR	11.	<i>BPH13</i>	<i>O-RING</i>
1.	BPH19	CORRUGATED HOSE 1" ID x 16" LENGTH	12.	BPH15	POWER SPRING
	BPH22	CORRUGATED OVAL HOSE 1" ID x 19" LENGTH	13.	BPH16	POWER BUTTON & STEM ASSY.
2.	BPH18	CABLE PIN	14.	BPH20	POWER SHAFT COMPLETE-FIELD SERVICE
3.	BPH06	ORAL SEAT	15.	BPH17	MOUTHPIECE
4.	<i>BPH05</i>	<i>O-RING FOR ORAL SEAT</i>	16.	BPH04	PLUG
5.	BPH08	QD NIPPLE	17.	BPH03	ORAL INFLATOR SPRING
6.	<i>BPH07</i>	<i>O-RING</i>	18.	BPH01	ORAL BUTTON (BLACK) AND STEM ASSEMBLY
7.	BPH09	POWER SEAT	19.	BPH21	Elbow
8.	<i>BPH10</i>	<i>O-RING</i>			

Part numbers in bold italics are standard replacement parts